


Low power mod

First: disconnect the power source (red wire of battery snap, or pin 3 of the 7809) from the board

***put a 10uF cap from v+ to ground on the board**

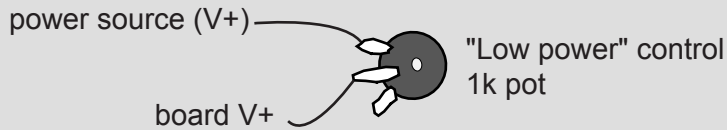

With the LFO mod, blend mod (or any mod that has its own board), take the power to the mod board *directly from the source*, not from the main board or from the low power pot. The same thing applies to LEDs

Noisegate fine tuning mod

Wire the noisegate pot and fine tuning pot like this:

