



2/16/01

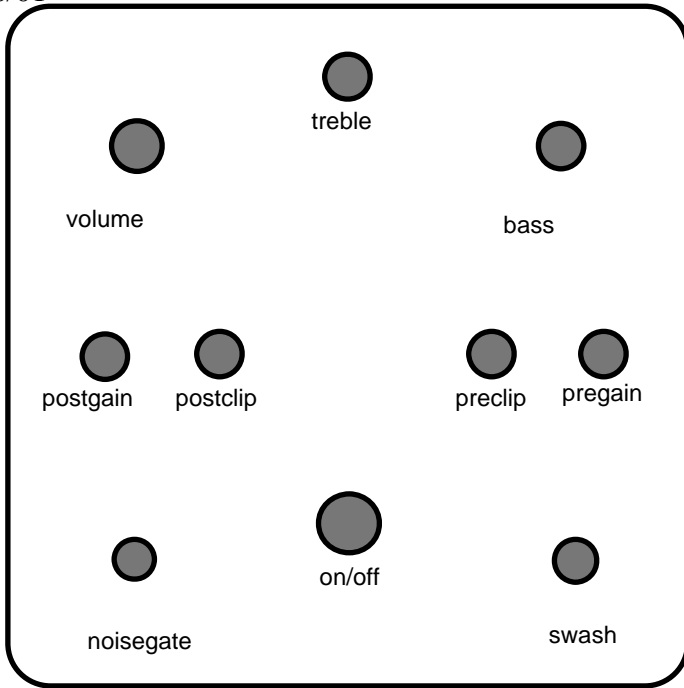

top view of box



right side view of box

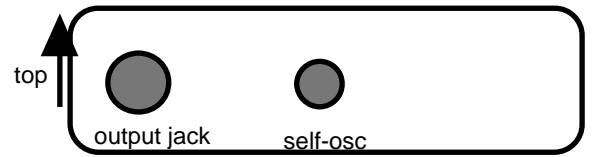

left side view of box

- Filled circles indicate holes to drill for putting pots/switches/jacks into
- Use 17/64" bit for pre/post clip
- Use 19/64" bit for pots
- Use 1/2" bit for on/off switch
- Use 3/8" bit for jacks
- Always drill a small (5/32" or less) pilot hole first [unless of course the hole to drill is already on top of a pre-drilled hole]